


V-Flex® Suction Pool Cleaner Owner's Manual

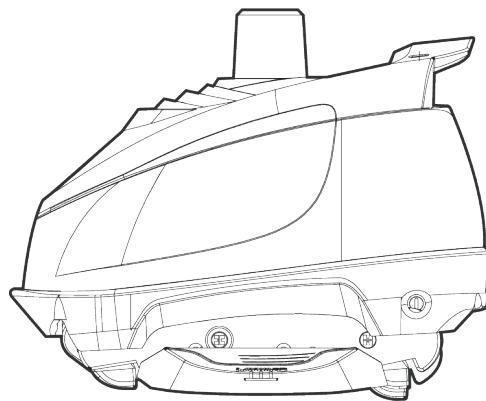

Australia Offices

NSW - Sydney [Head Office]
Tel : +61 2 9898 8686

WA - Perth
Tel : +61 8 9273 1900

SA / NT - Adelaide
Tel : +61 8 8244 6000

VIC/ TAS - Melbourne
Tel : +61 3 9764 1211

QLD - Brisbane
Tel : +61 7 3299 9900

ACT Distributor
Tel : +61 2 6280 6476

New Zealand Office

Waterco (NZ) Limited Auckland, New Zealand
Tel : +64 9 525 7570

SWIMKLEEN NAV SUCTION CLEANER

Owner's Manual

Congratulations on your purchase of your SwimKleen Nav automatic suction pool cleaning system. Your Cleaner is the smart, efficient way to clean your in-ground pool.

SwimKleen Nav Suction Cleaners are powered by your pool's filter system and are designed to work well with most systems. The performance of the Cleaner in your pool will be relative to its power source. Because the operation and performance of the Cleaner are system reliant, there is a remote possibility that a service call may be necessary to complete the proper installation of your Cleaner. This call will be at the consumer's expense.

Lastly, one or more of the accessories designed for the Cleaner, including additional hose* sections, might be applicable to your installation. Consult your local Swimart Store for pricing and availability. For Technical Assistance, call your local Swimart Store: 1300 991 104.

FOR YOUR RECORDS

Purchase Date:

Serial Number:

SAFETY WARNINGS

DO NOT use to remove large debris in new pools.

REMOVE cleaner and hose before adding ANY chemicals to your pool.

DO NOT swim with cleaner.

Store the cleaner in a shaded safe area.

Hoses must be stored straight. **DO NOT** coil the hose.

KEEP AWAY from children and pets.

REMOVE cleaner when performing backwash.

REMEMBER safety first.

KEY



Tip



Pressure Adjustment




Attention



Pump





CARTON CONTENTS

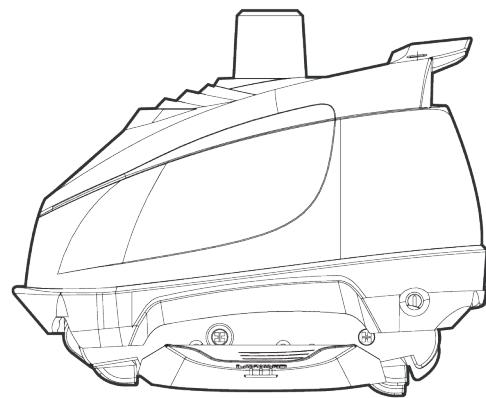

x1

SwimKleen Nav V-Flex®

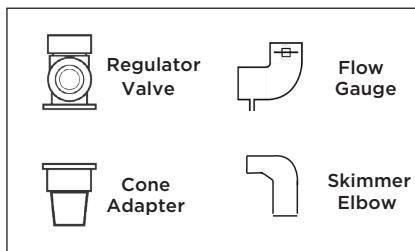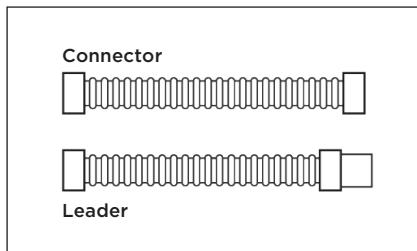

Connector/Leader Hoses Accessory Kit

SwimKleen Nav V-Flex®:

x11 Connectors

x1 Leader

Correct shoe selection for operation

- Your cleaner comes fitted with shoes to suit a concrete pool.

Replacement 4 pack AXV414P

- Also included is a 4 pack of cork shoes to be used in a fibreglass or vinyl lined pool. Follow the instructions on page 17 for changeover.

Replacement 4 pack AXV413P

- For a tiled pool surface a 4 pack of ceramic shoes will need to be ordered separately.

Part number: AXV014CP

PREPARING THE POOL

Please complete the following steps to prepare your pool for installation:




DEBRIS

Remove any large objects and excessive debris from the pool.

WATER LEVEL


Confirm that water level is at the recommended level.

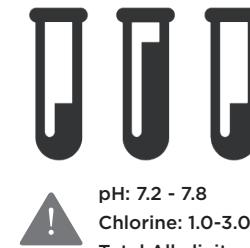

pH: 7.2 - 7.8
Chlorine: 1.0-3.0 P.P.M
Total Alkalinity: 80 - 120 P.P.M

WATER CHEMISTRY

Make sure water is properly balanced and that the pool is free from algae.

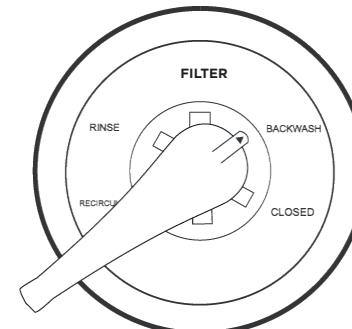

FILTER

Clean or backwash the filter.

Clean the hair and lint prior to installing the Cleaner.


INSTALLATION

Sizing Suction Hose

Step 1


Connect hose sections.

Note: Make sure all connections are tight to prevent air leaks.

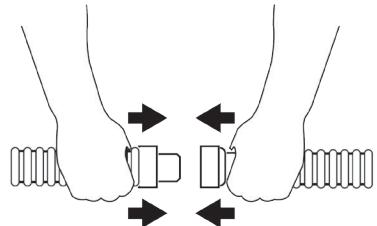


TIP: Wetting the hose ends will make it easier to connect the hose sections.

! If optional Leaf Canister is purchased, install between 1st and 2nd hose sections.

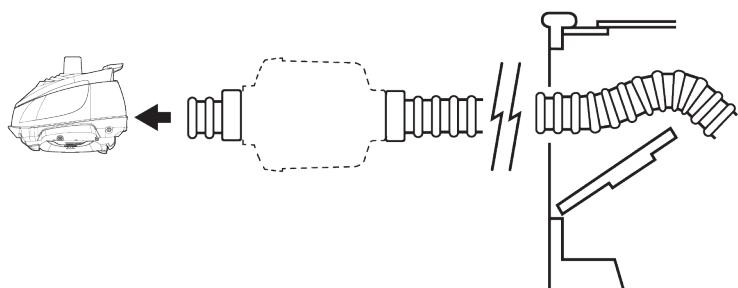

Step 2


Pull hose to farthest point of the pool and then add **2 extra hose sections**.

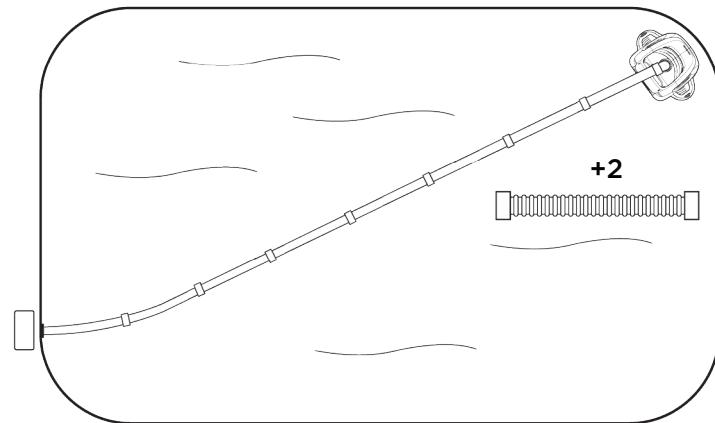

Step 3



Fill hose completely with water. Insert Flow Gauge into the leader hose. Attach the C-Clip of the gauge onto the 1st hose section.

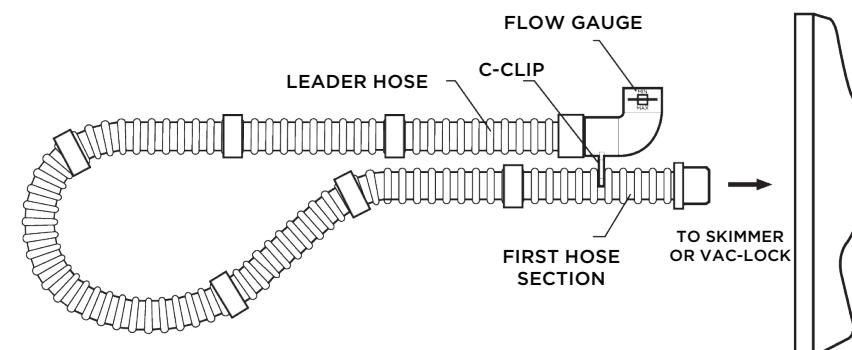

! Make sure the Flow Gauge is under water.

INSTALLATION



Step 4

Connecting to Skimmer:

Connect the Skimmer Elbow adapter to tapered male end of the vacuum hose.

Connecting to a Vac Lock:

Insert the hose end directly into the Vac Lock **without using the cone**.

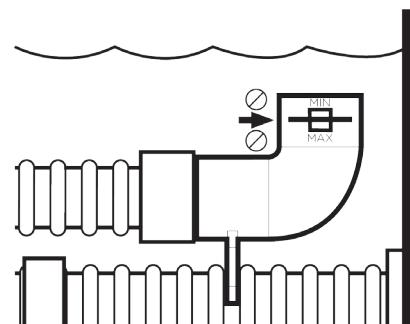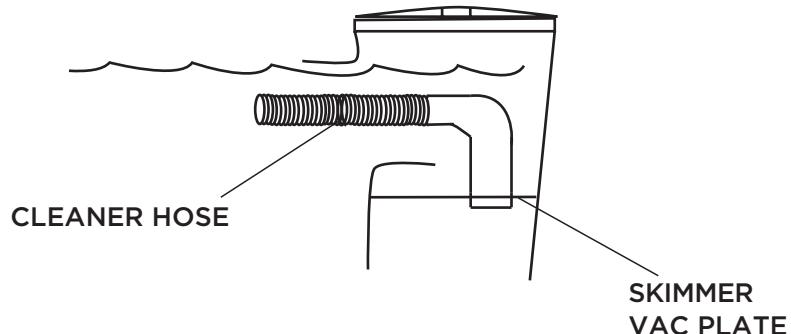


Step 5

ON
Check the water flow reading on the Flow Gauge.

The black disk should be between the "MIN" and "MAX" markings.

If the disk is in the proper location, move on to step 6.

Reading Too High?

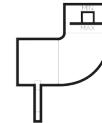


If the black disk is outside of the box on the "MAX" side and you have connected your hose to the skimmer, reduce the vacuum/water flow by using one of the following:

- Suction Valve(s) in the filter system
- Regulator Valve

To install the Regulator Valve:




1. Remove the hose from the Skimmer Elbow
2. Close the Regulator Valve by rotating the blue collar clockwise until tight.
3. Insert the Valve into the Skimmer Elbow and the hose end into the Valve.
4. Turn the filter system on and allow it to eliminate any air in the system.
5. Turn the blue collar clockwise until proper reading appears.

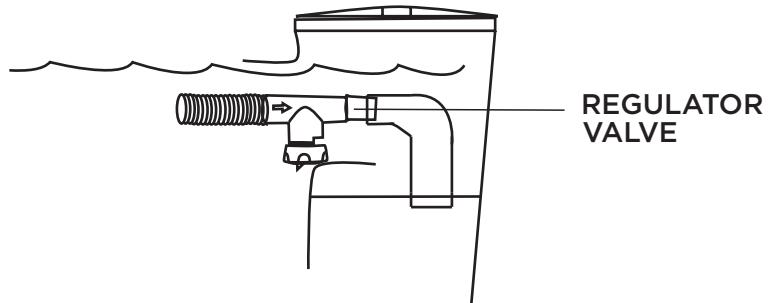

INSTALLATION

Reading Too Low?

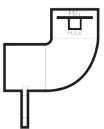


! An initial vacuum reading that is TOO low to meet the water flow setting necessary to operate the Cleaner is indicative of a system problem, and not a problem with the Cleaner.

The Regulator Valve cannot be used to INCREASE the initial vacuum reading.


View our YouTube video or contact your authorised Hayward Dealer for assistance.

Step 6

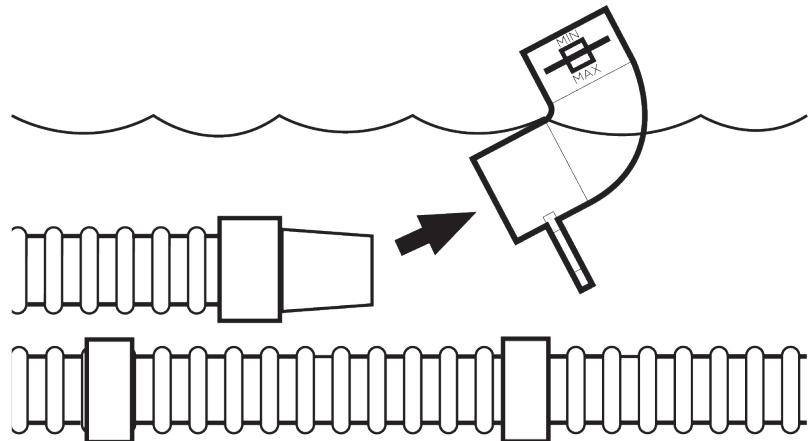


Step 7

Submerge the Cleaner into the water to remove all air. Fill hose completely with water.

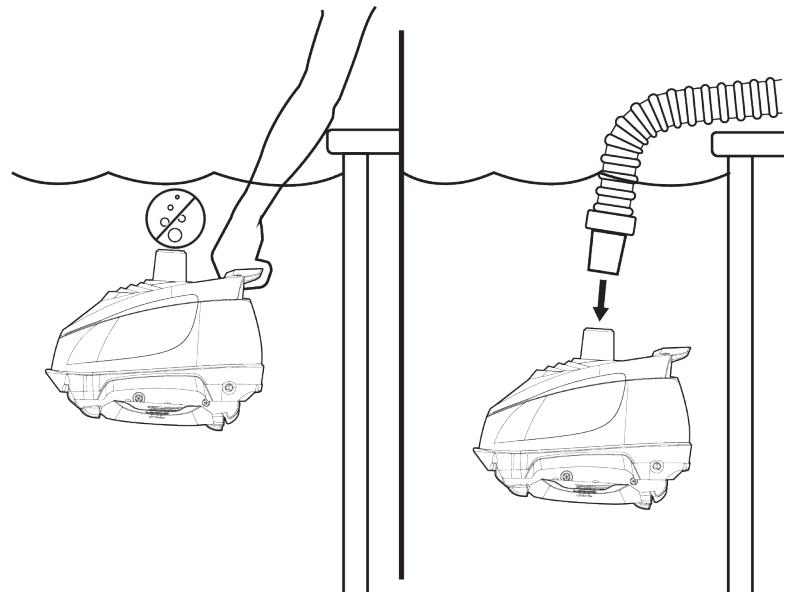

Step 8

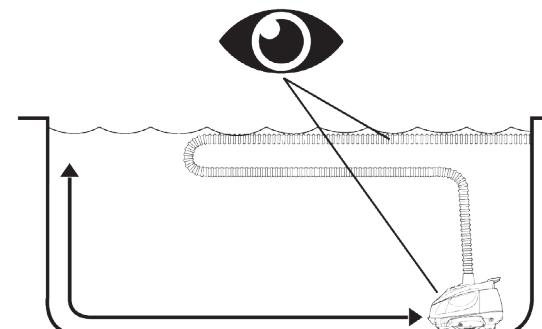


FINE ADJUSTMENTS

- Sticking on Steps/Liner/Obstacles


Your Cleaner should move about the pool without spending an excessive amount of time against the steps or other obstructions.

If the cleaner seems to get "hung up," turn the rear flapper adjuster to **Position I**.

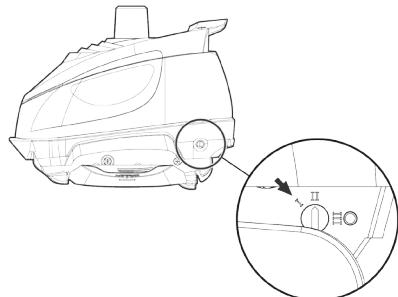


- Not Climbing the Walls or Stays on the Floor

If the Cleaner does not seem to be "sticking" to the wall, turn the rear flap adjuster to **Position III**.

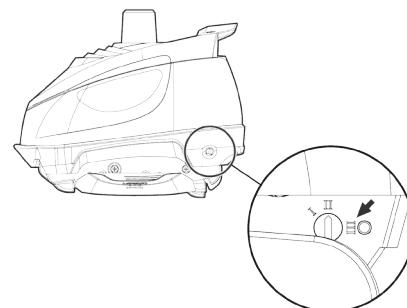


- Sucking Air At Surface or Climbing Too High

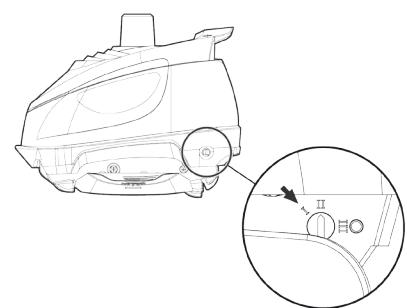

⚠ Be aware that your Cleaner will climb the vertical walls in concrete and fiberglass pools if there is at least a seven inch 180mm radius where the walls and floor meet.

Due to the programmed steering, the Cleaner will not climb a wall every time it comes into contact with one.

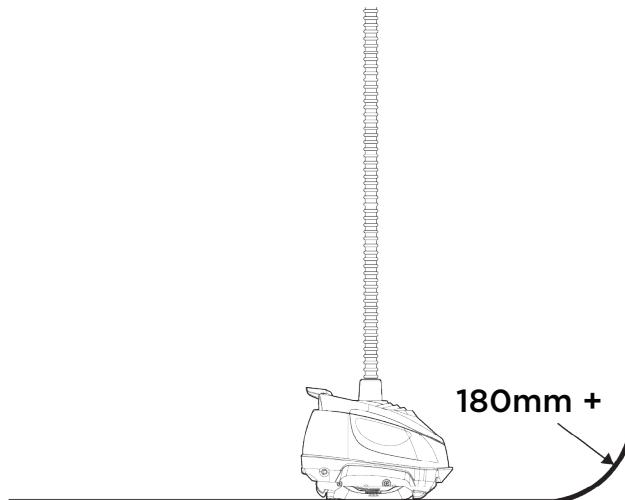

IMPORTANT TIPS

 Periodically check the water flow/vacuum to be sure that your Cleaner is operating as efficiently as possible.

Remember, too much vacuum is just as bad as too little.


 Periodically check to make sure that the Cleaner hose is securely attached to its suction source (i.e. Skimmer, Skimmer Vac Plate, Vac Lock, etc.)

 Disconnect the Cleaner hose from the Skimmer/Regulator Valve, or, if using a "dedicated line," turn cleaner valve off prior to "backwashing", so as not to restrict water flow.

DO NOT COIL HOSE

When storing your Cleaner, the hose sections must be stored straight. A coiled hose will create a memory in the hose that will impede the Cleaner's ability to move properly.

 Coiled hoses are not covered under warranty.

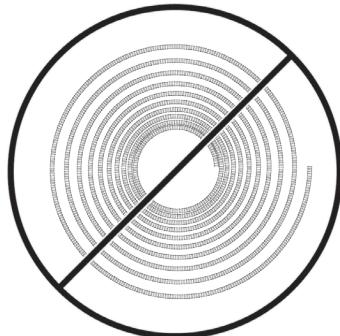


 Use only original SwimKleen Nav spare parts and hoses to ensure proper operation.

 When the Cleaner is out of the pool, always disconnect the leader hose from the Cleaner's head.





 Do not swim while cleaner is in the pool.

 Do not add chemicals to the pool while cleaner is in the pool.

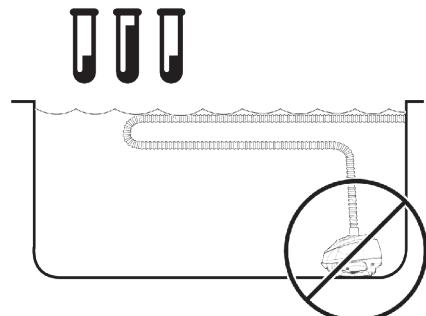

MAINTENANCE TIPS


Check the condition of the "shoes, wings, and flaps" periodically.

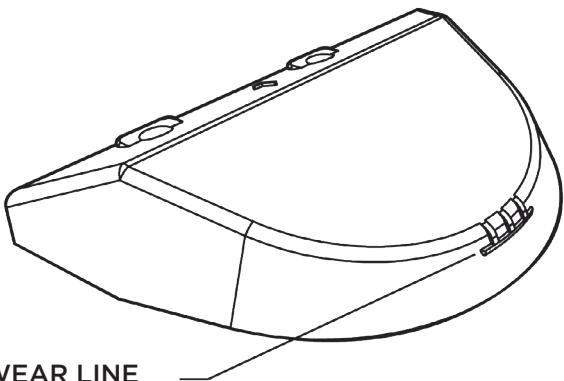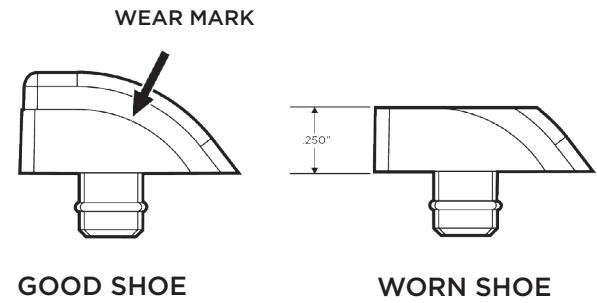


! The manufacturer is not responsible for damage caused by worn or broken parts. Or damage caused by misuse of the cleaner.

Shoe Replacement:

Step 1

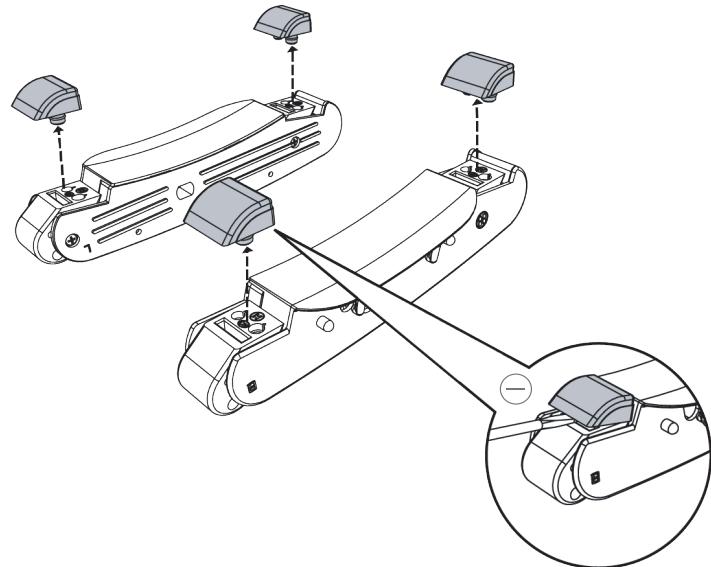


Step 2

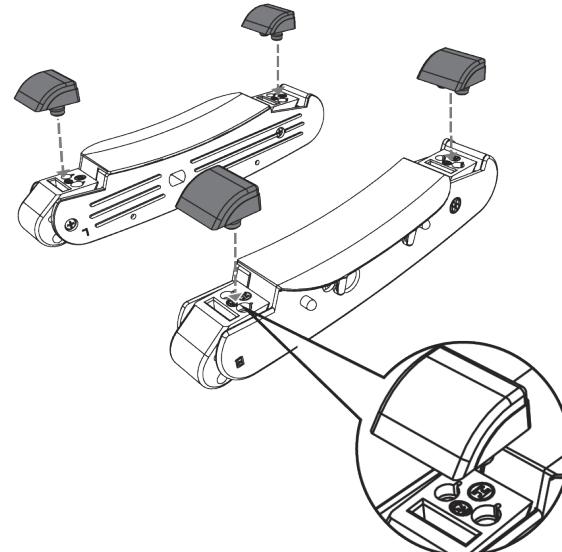


MAINTENANCE TIPS

Wing Replacement:


Step 1

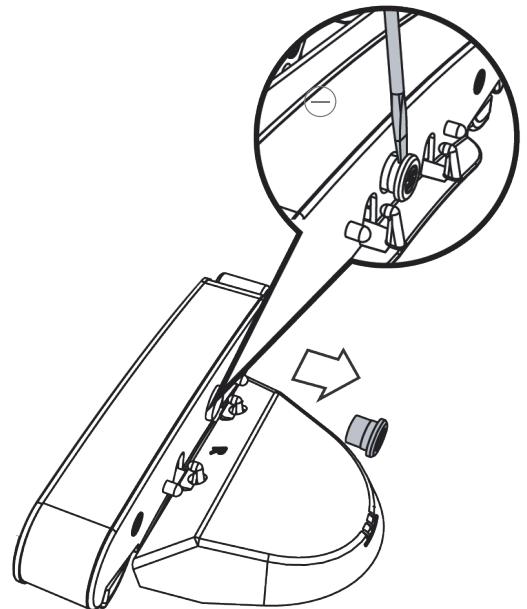


Step 3

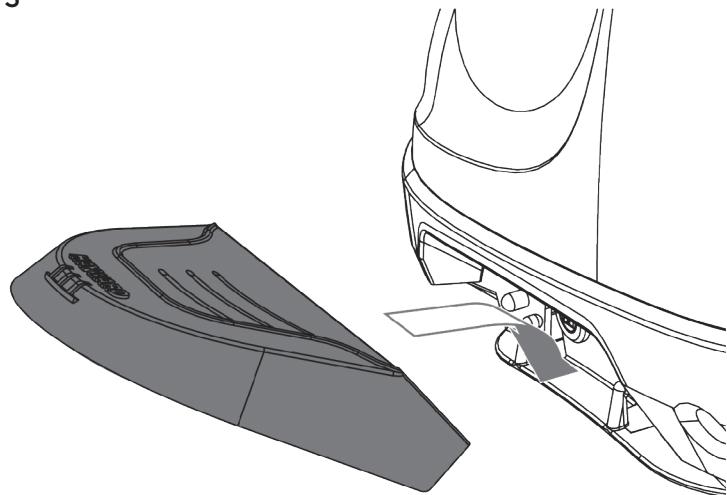

Step 2

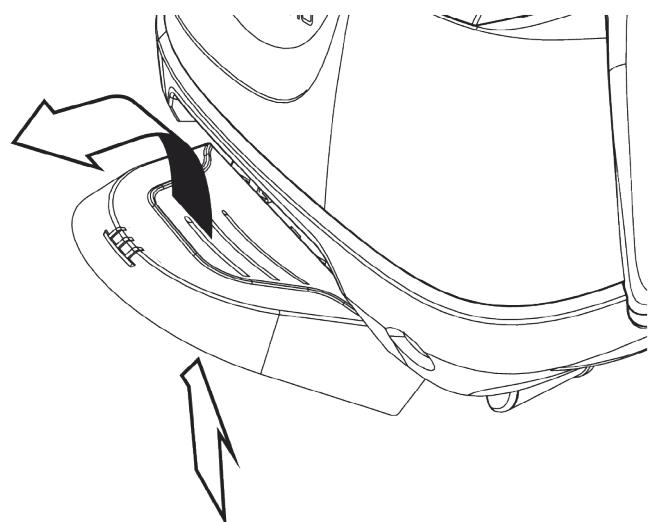


Step 4

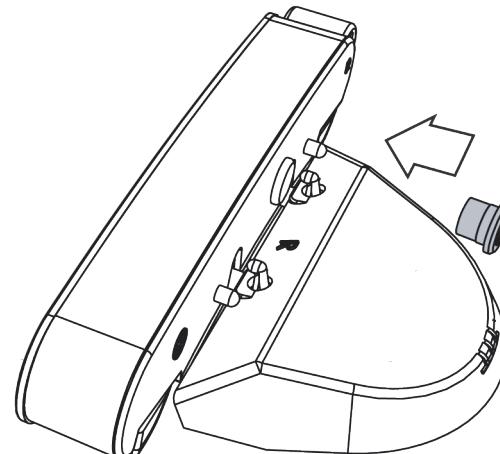


MAINTENANCE TIPS

“Easy Opening Bottom”: For Turbine Access and Inspection

Step 1

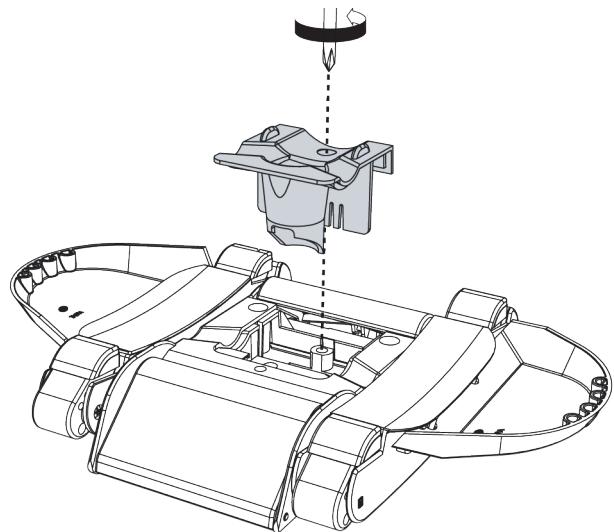

Step 2

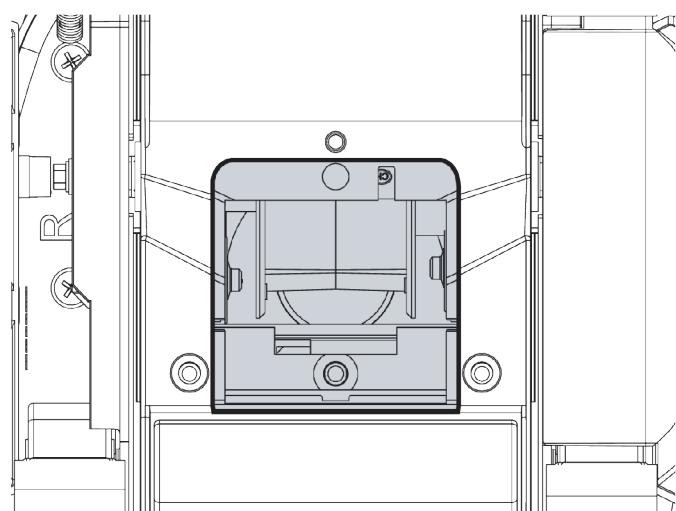

TROUBLESHOOTING

FOR TECHNICAL ASSISTANCE, CALL YOUR LOCAL SWIMART STORE: 1300 991 104

PROBLEM	CAUSES	SOLUTION
Slow/no forward movement	Lack of/improper water flow through cleaner	Check water flow with Flow Gauge and adjust as per Step 5
	Blockage of the Cleaner throat	Clear blockage
	Worn shoes	Replace shoes
	Worn wings	Replace wings
	Improper cleaner model for application	Call 1300 991 104
Cleaner fails to climb vertical walls gunite/concrete pool	Improper shoes for application	Call 1300 991 104
	Lack of/improper water flow through cleaner	Check water flow with Flow Gauge and adjust as per Step 5
	Blockage of the Cleaner throat	Clear blockage
	Worn shoes	Replace shoes
	Worn wings	Replace wings
	Hose too short	Install additional hose sections per installation instructions.
	Improper tension on rear flap	Turn rear flap adjuster to III
Cleaner climbs to water surface and sucks air	Too much/improper water flow through cleaner	Check water flow with Flow Gauge and adjust as per Step 5
	Improper tension on rear flap	Turn rear flap adjuster to position 1. If still climbing too much, reduce water flow until proper operation is achieved.
	Steering failure	<ol style="list-style-type: none">1. Check and clean rear screen2. Check to see that cone gear is free and rotates smoothly in both directions3. Check medium turbine and spindle gear assemblies for malfunction

TROUBLESHOOTING

swimkleen
NAV

PROBLEM	CAUSES	SOLUTION
Cleaner head "floats"	Cleaner head is HEAVIER than WATER, and should not "float"	Remove all air from cleaner head. Stop all air from entering the pool through the return lines. If cleaner head and hose are covered with fine bubbles, give the hose a good tug. This will release the air bubbles and allow the cleaner head to settle to the bottom of the pool until the hose is covered with bubbles again.
	The Cleaner head is actually being pulled or lifted off the bottom of the pool by the cleaner hose, or return line flow -either at the surface or at the bottom of the pool -or both.	Readjust return outlets to prevent water flow interfering with cleaner head and/or hose
	Improper water flow	Check water flow with Flow Gauge and adjust as per Step 5
Cleaner sticks at steps, corners, etc.	Worn shoes	Replace shoes
	Worn wings	Replace wings
	Hose too short	Install additional hose sections per installation instructions.
	Steering failure	<ol style="list-style-type: none"> 1. Check and clean rear screen 2. Check to see that cone gear is free and rotates smoothly in both directions 3. Check steering program and troubleshoot -then: <ol style="list-style-type: none"> a. clean, repair or replace gearbox b. check pod/A-frame connection and REPLACE IF NECESSARY. DO NOT ATTEMPT TO RETIGHTEN LOOSE PODS. c. check medium turbine and spindle gear assemblies

Warranty- Standard Conditions

Hayward Pool Products (Australia) Pty Ltd (ACN 083 413 414) ("Hayward Pool Products (Australia)") distributes Hayward Pool Products in Australia and New Zealand and provides the following warranties:

STATUTORY RIGHTS

1. The benefits to the consumer under this warranty are in addition to other rights and remedies of the consumer under the laws in relation to the goods and services to which the warranty relates; and
2. Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.

STANDARD WARRANTY

This warranty is personal to the original purchaser and does not pass to any subsequent purchaser(s).

To the extent permitted by law, Hayward Pool Products (Australia) will not be liable for products which fail or become defective during the warranty period as a result of freezing, accident, negligence, improper installation, water chemistry, misuse or lack of care.
 To the extent permitted by law, except as set out in this Warranty, Hayward Pool Products (Australia) excludes all statutory or implied conditions and warranties and any other liability it may have to the Customer (including liability for indirect or consequential loss) that may arise under statute or at law including without limitation for breach of contract, tort (including negligence) or under any other cause of action.
 To the extent permitted by law, except as set out in this Warranty, Hayward Pool Products (Australia) limits its liability under any condition or warranty which cannot be legally excluded in relation to the supply of Goods and Services to:

1. Replacing the Goods or supplying equivalent Goods or Services again;
2. Repairing the Goods;
3. Paying the cost of replacing the Goods or of supplying equivalent Goods or Services again; or
4. Paying the costs of repairing the Goods.

EXTENDED WARRANTY

Professional Sales and Installation- Effective July 1st, 2016

Product Description	Sold and installed by an approved installer	
	Parts	In-field Labour
SwimKleen Nav V-Flex Automatic Pool Cleaner*	3 Years	Bench Only

*Wear items are considered maintenance items and are therefore not covered under the general warranty policy unless they display a true manufacturer's defect.
 Wear items include wings, shoes, and flaps on suction cleaners as well as cartridges, drive tracks, and rollers on robotic cleaners.

WARRANTY CLAIM

What do I do if I have a warranty claim?

The faulty product is to be returned to the place of purchase, or where installed by an approved agent to an authorised warranty agent. No returns will be received directly from end consumers by Hayward Pool Products (Australia). You are responsible for arranging removal of the defective product and arranging installation of the repaired or replacement product, all transportation (and any applicable insurance costs) of transporting the product to the supplier and transporting the replaced or repaired product from the supplier.

All returns are subject to Hayward Pool Products (Australia)'s written approval and must be accompanied by either:-

1. A Field Inspection Report authorised by the Local Customer Service Manager or Authorised Agent; or
2. A "Return Goods Authorisation" form obtained from Hayward Pool Products (Australia) prior to shipment.

Unauthorised returns will not be accepted.

All Hayward Pool Products (Australia) warranty parts taken as an across the counter warranty exchange must be held for inspection until authorisation has been given by the Local Branch Customer Service Manager to dispose of them. Hayward Pool Products (Australia) reserves the right to provide replacement or credit for any items authorised under this warranty program.

All claims must be accompanied by a copy of original purchase receipt, clearly stating date of purchase. All serial numbers must place the product within the warranty period or a proof of purchase is required. No claims in respect of the product can be made after the expiration of the warranty period.

Warranty service requests can be faxed to:
Hayward Pool Products (Australia) Pty Ltd.
 Fax: 1300 POOLS2 (1300 766571)

Or submitted to your local Hayward Pool Products (Australia) Branch Office.

Still have questions?

Contact one of our friendly staff members for further assistance or direction on **1300 POOLS 1** or via email on sales@hayward-pool.com.au.



Hayward, ProSeries, SwimPro ProGrid, SwimClear, StarClear Plus, TigerSharkQC, OnCommand, Universal H Series and Powerline are registered trademarks of Hayward Industries, Inc. © 2016 Hayward Industries, Inc.



For more information on Waterco
products and services visit **www.waterco.com**