

FlowVis[®]

Flow Meter
Instruction Manual
for 40mm/1.5" (FV-C-L-15)



Available from:

WATERCO

water, the liquid of life

36 South Street
Rydalmere NSW 2116
02 9898 8600



www.h2flow.net




TABLE OF CONTENTS

Section	Content	Page
1.0	Description	3
2.0	Concept	3
3.0	Applications	3
4.0	Installation	4
5.0	Operation	5
6.0	Maintenance	5
7.0	Specifications	6
8.0	Warranty	7



IMPORTANT - PLEASE READ THE FOLLOWING INSTRUCTIONS BEFORE INSTALLING FLOWVIS®

IMPORTANT DISCLAIMER REGARDING CHLORINE FEEDERS: FlowVis® is renowned for its ability to have virtually no installation limitations. However, certain inexpensive 'hockey puck' style chlorine feeder systems may cause premature failure of the FlowVis® unit. If the chlorine feeder is not installed in accordance with its manufacturer's strict instructions, or its integrated (or separately installed) check valve fails to operate, chlorine gas or high concentrations of liquid chlorine / acidic chemicals will develop when the pump is turned off. Under such circumstances, it is likely that the FlowVis® will experience an attack from these chemicals and that a premature failure will occur. The effects of this attack are very distinct and the FlowVis® unit **WILL NOT** be covered under its manufacturer's warranty.

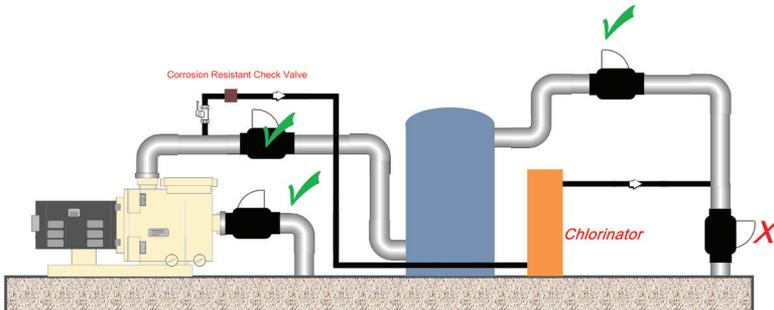



1.0 DESCRIPTION


FlowVis® is a revolutionary Patent Pending product that converts a standard Check Valve into a Flow Meter and Check Valve.

This instruction manual is intended for use with FlowVis model FV-C-L-15, for 40mm/1.5" pipe diameter installations that have a LPM scale.

Note: FlowVis® 40mm/1.5" is NOT **NSF** approved.

2.0 CONCEPT

As flow increases, the check valve flapper extends towards its fully open position. The angular position of the flapper is determined by the flow through the valve body. A calibrated scale on the valve lid provides an accurate reading of flow.

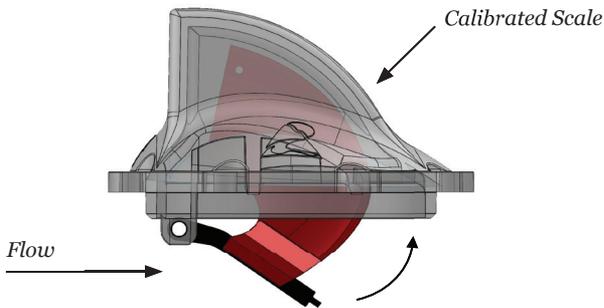

3.0 APPLICATIONS

FlowVis® is specifically designed for use in fresh water applications (i.e., swimming pools, spas, fountains, water features, etc). It is not suitable for applications that are contaminated with debris of such a size that it would prevent the check valve flapper from fully seating against the valve body.




4.0 INSTALLATION

IMPORTANT NOTE: Before installing the FlowVis® unit, please refer to the Important Disclaimer included on Page 2 of this manual.

Installation of the FlowVis® should be in accordance with the following instructions. Normal plumbing procedures such as cleaning, priming and gluing of fixtures should be followed in order to avoid leaks.

Unlike other flow meters, FlowVis® is not effected by flow stream disturbances caused by its proximity to pumps, elbows, tees, valves etc. FlowVis® does not require specific straight pipe lengths before or after its point of installation and can be installed close to, or even adjacent to other plumbing fittings. FlowVis® can be installed either horizontally or vertically.

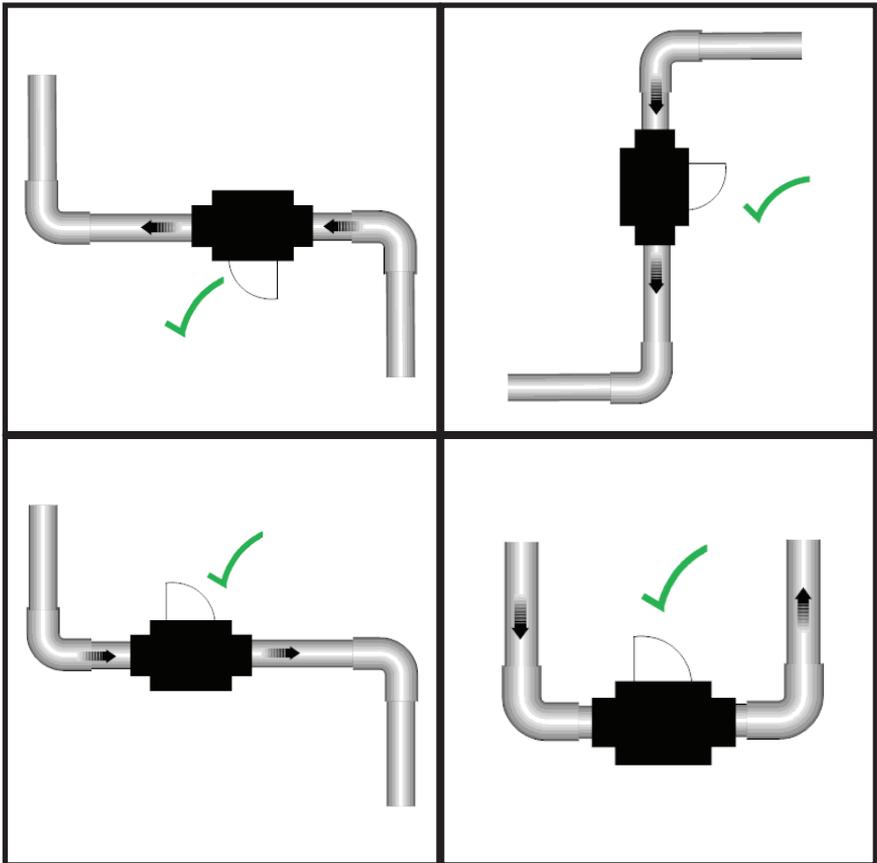


NOTE: When selecting a physical location to install FlowVis®, be sure to allow accessibility to read the scale on the lid.



5.0 OPERATION

The FlowVis® is factory-calibrated to be extremely accurate across its full operating range. Any 'inaccuracy' is related to the angle in which the scale is read. To avoid so-called 'parallax error', it is important to position your eye so that you are looking squarely at the tip of the indicator arm. To achieve this, simply move your head so that you just lose sight of the vertical leading edge of the red arm.

NOTE: Slowly move your head in this direction to the point where the leading edge of the indicating arm is not visible.

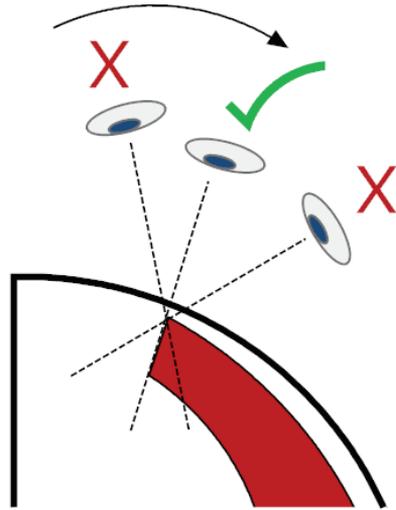

6.0 MAINTENANCE

Although FlowVis® is designed to be maintenance-free, periodic checks should be made to the following:

Item	Check for	Remedy
'O' ring seal	Check for leaks	Replace 'O' ring
Valve Body	Check for cracks or damage	Replace entire FlowVis®
Lid	Check for cracks or damage	Replace entire FlowVis®
Indicator Arm	Check to see if sticking due to build up of debris	Remove lid and flush out debris
Lid	Air bubbles in lid	Check plumbing system for air leak



7.0 SPECIFICATIONS

Materials used:

Item	Material / Comments
Valve Cover Screws	Stainless Steel
Valve Body	CPVC Plastic, Chlorine, Acid resistant
Valve Lid	Poly Carbonate (PC), Chlorine, Ozone resistant
Calibrated Spring	Stainless Steel
Pivot Pin	Stainless Steel
'O' Ring	Silicone-Lubricated Elastomer

Operation:

Function	Comments
Maximum Working Pressure	50 psi
Design Pressure	>400 psi
Minimum operating ambient temperature	32°F (0°C)
Maximum operating ambient temperature	140°F (60°C)
Periodic Calibration	None required
Design Life	Greater than 5 years



8.0 WARRANTY

IMPORTANT, please read and keep this document on record.

1. Definition: H2flow Controls Inc. warrants that the products that it manufactures and sells will be free from defects in material and workmanship for a period of 12 months from the date of shipment.

Should the product prove defective during the warranty period, H2flow Controls Inc, at its discretion, either will repair the defective product or replace it with an equivalent product in exchange for the defective unit without charge for parts, labor, carriage and insurance.

2. Eligibility: This warranty extends to the original purchaser only or to the end-user client of an H2flow Controls Inc. authorized affiliate.

3. How to obtain service: To obtain service under the terms of this warranty, the customer is required to notify H2flow Controls Inc. before the expiration of the warranty period and to return the item in accordance with H2flow Controls Inc's product return policy. Any product returned for warranty repair must be accompanied by a full fault report specifying the symptoms and the conditions under which the fault occurs. Should H2flow Controls Inc incur additional cost as a result of a failure to complete the appropriate paperwork, an administrative charge may be levied.

4. Exclusions: This warranty shall not apply to any defect, failure or damage caused by improper use or improper or inadequate care. H2flow Controls Inc. shall not be obligated to provide service under this warranty if:

- a) damage has been caused by a failure to make a full and proper inspection of the product (as described by the documentation enclosed with the product at the time of shipment) on initial receipt of the product following shipment;
- b) damage has been caused by the attempts of individuals, other than H2flow Controls Inc staff to repair or service the product;
- c) damage has been caused by the improper use of the product, including but not limited to, the installation of a FlowVis® unit using a chlorination system as described on page 2 of this manual.

5. Charges: Under cover of this warranty, H2flow Controls Inc will pay the carriage and insurance charges for the shipment of defective product back to H2flow Controls Inc and for its return to the client's original site of dispatch except when:

- a) H2flow Controls Inc's product return policy has not been followed.
- b) product failure is caused by any of the exclusions described at paragraph 4 above, when the customer will be liable for the full cost of the repair (parts and labor) plus all carriage and insurance costs to and from H2flow Controls Inc's premises.
- c) the product is damaged in transit and a contributory cause is inadequate packaging. It is the customer's responsibility to ensure that the packaging used to return equipment to H2flow Controls Inc is the same, or has equivalent protective qualities, to that used to ship the product to the customer in the first instance. Any damage resulting from the use of inadequate packaging will nullify H2flow Controls Inc's obligations under this warranty. Should the customer's product be damaged in transit following a repair at H2flow Controls Inc's site, a full photographic record of the damage must be obtained (packaging and the product) to support any claim for recompense. Failure to present this evidence may limit H2flow Controls Inc's obligations under this warranty.

THIS WARRANTY IS GIVEN BY H2FLOW CONTROLS INC IN LIEU OF ANY OTHER WARRANTIES, EXPRESS OR IMPLIED, INCLUDING BUT NOT LIMITED TO ANY IMPLIED WARRANTY OF MERCHANTABILITY, NON INFRINGEMENT OR FITNESS FOR A PARTICULAR PURPOSE. H2FLOW CONTROLS INC SHALL NOT BE LIABLE FOR ANY SPECIAL, INDIRECT, INCIDENTAL OR CONSEQUENTIAL DAMAGES OR LOSSES. WE SPECIFICALLY DISCLAIM ANY AND ALL WARRANTIES TO CUSTOMERS OF THE CUSTOMER. THE CUSTOMER'S SOLE REMEDY FOR ANY BREACH OF WARRANTY IS THE REPAIR OR REPLACEMENT, AT H2FLOW CONTROLS INC'S DISCRETION, OF THE FAILED PRODUCT.

Sales & Support Telephone hotline: (+1) 888 635 0296

Sales & Support E-mail: sales@h2flow.net

NOTES: